



# **2020+ Cadillac CT5-V BIG MOUTH Ram Air Intake Installation Guide**



## Kit Contents

Please review this document before attempting installation.

You will need basic hand tools and 2 hours of installation time.

Kit Contents	Qty
M4 x 20mm Cap Screw	2
M4 x 40mm Cap Screw	2
Clamshell w/ Threaded Inserts	2
Assembled BIG MOUTH	2







## **Stock Components Removal**

Use the resources available online to research how to remove the bumper for your specific trim level. There is no need to undo the wiring harness. Propping the bumper up with a non-abrasive support while maintaining slack in the wiring harness will suffice for this install.



## BIG MOUTH Placement



The BIG MOUTH is meant to feed the indicated intake opening. Pull back on the air shield to position the BIG MOUTH over the diagonal brace and line it up with the perimeter of the opening.

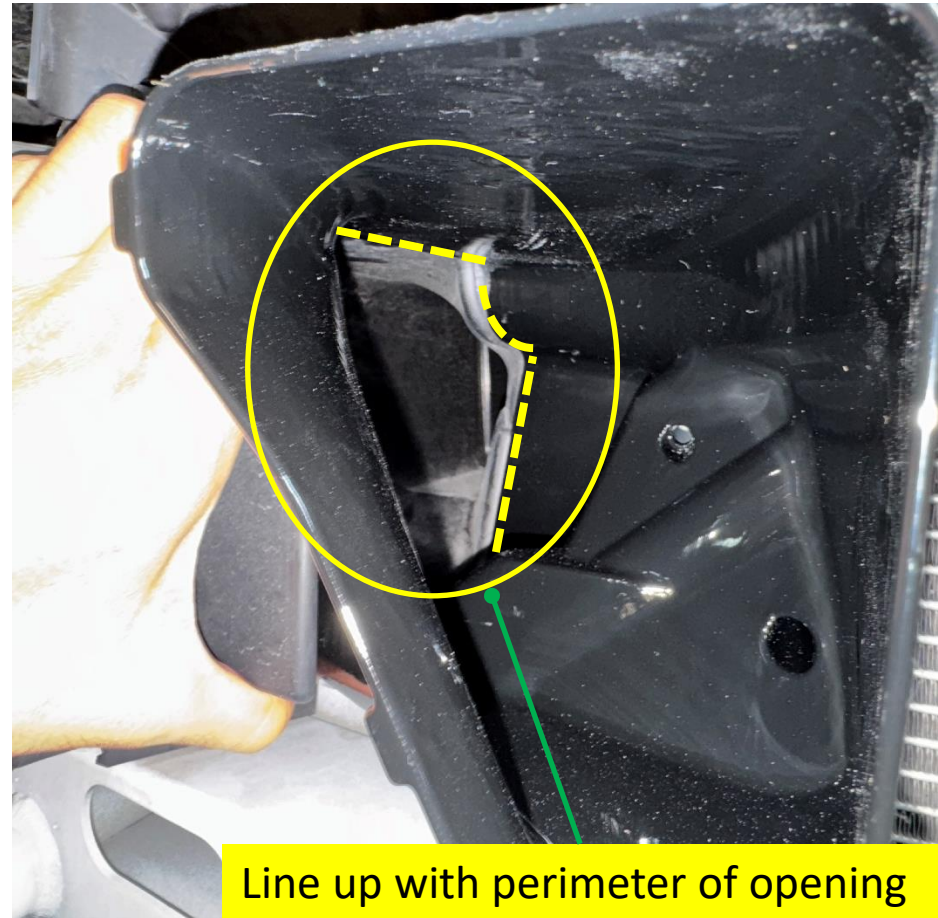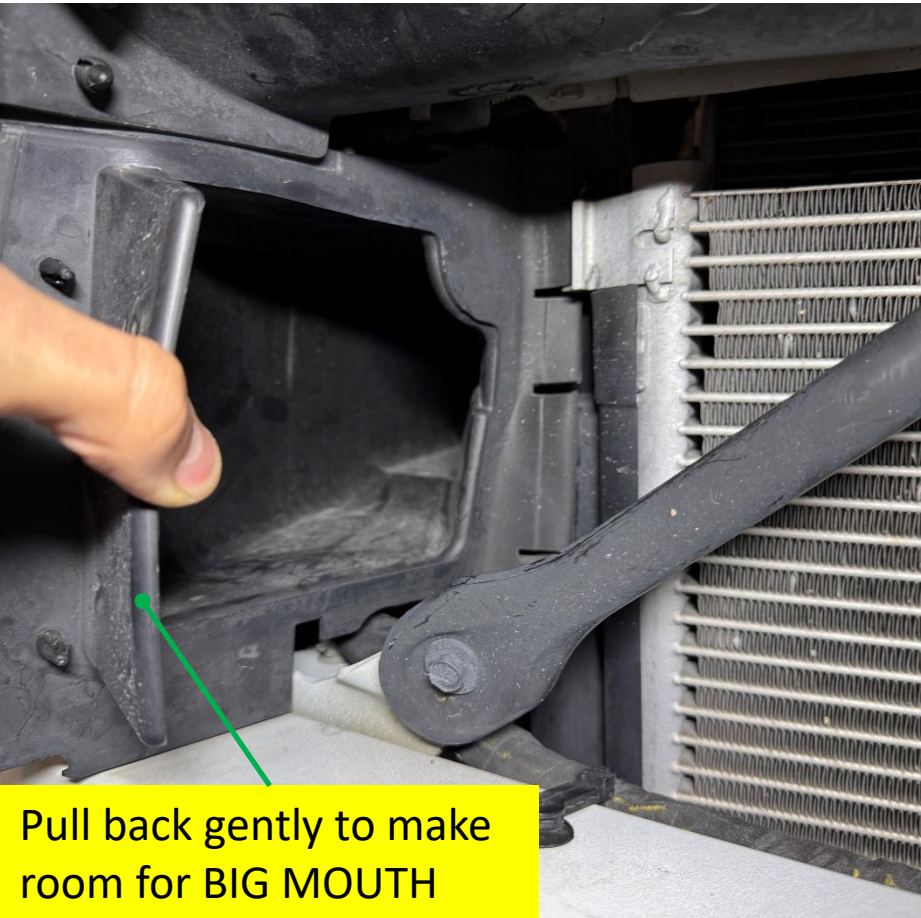



## BIG MOUTH Fastening

Slide any one of the two clamshells into the groove on the backside of the diagonal brace and line up its threaded inserts with the holes on the BIG MOUTH. Use the provided M4 cap screws to fasten the BIG MOUTH. Use the shorter screw for the uppermost hole. **Tighten in an alternating sequence.** There should be a gap between the rear face of the BIG MOUTH and the clamshell. Repeat for the other side.

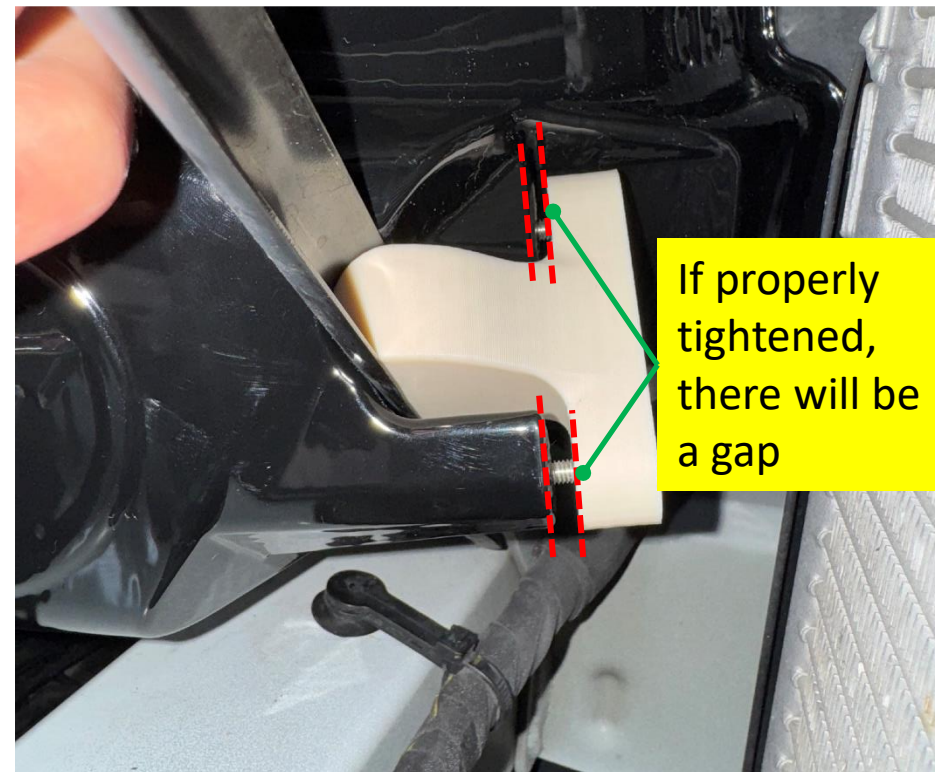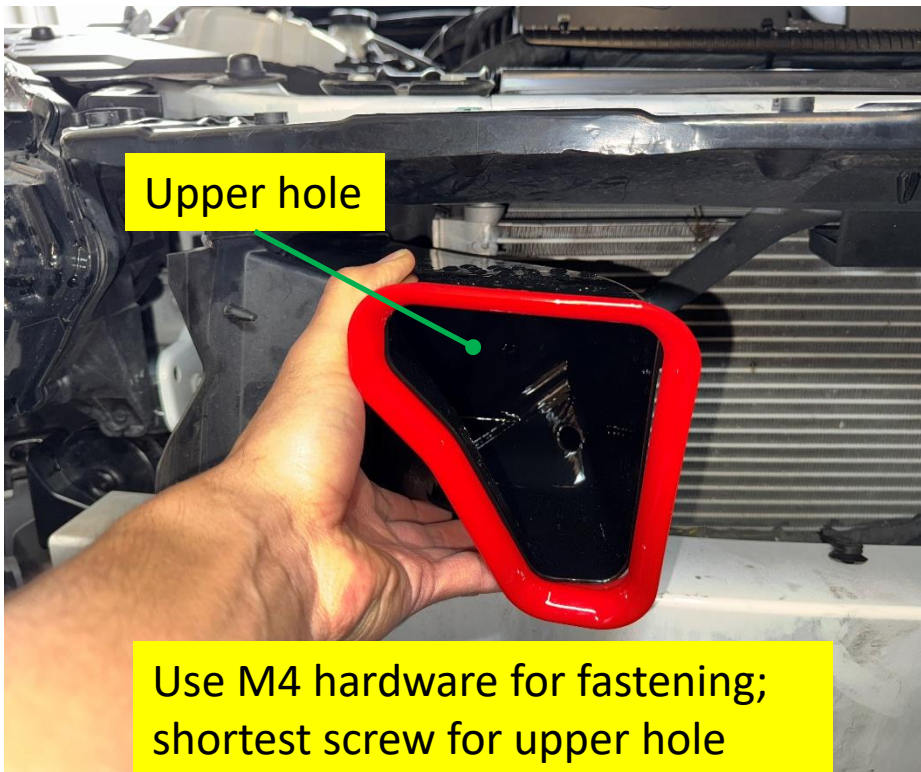





## Adjustability

If adjustment is needed, loosen the M4 cap screws and tighten again while holding the corresponding BIG MOUTH in its desired position.





**Finalize**



**Reinstall the bumper the same way it was removed and enjoy!**